
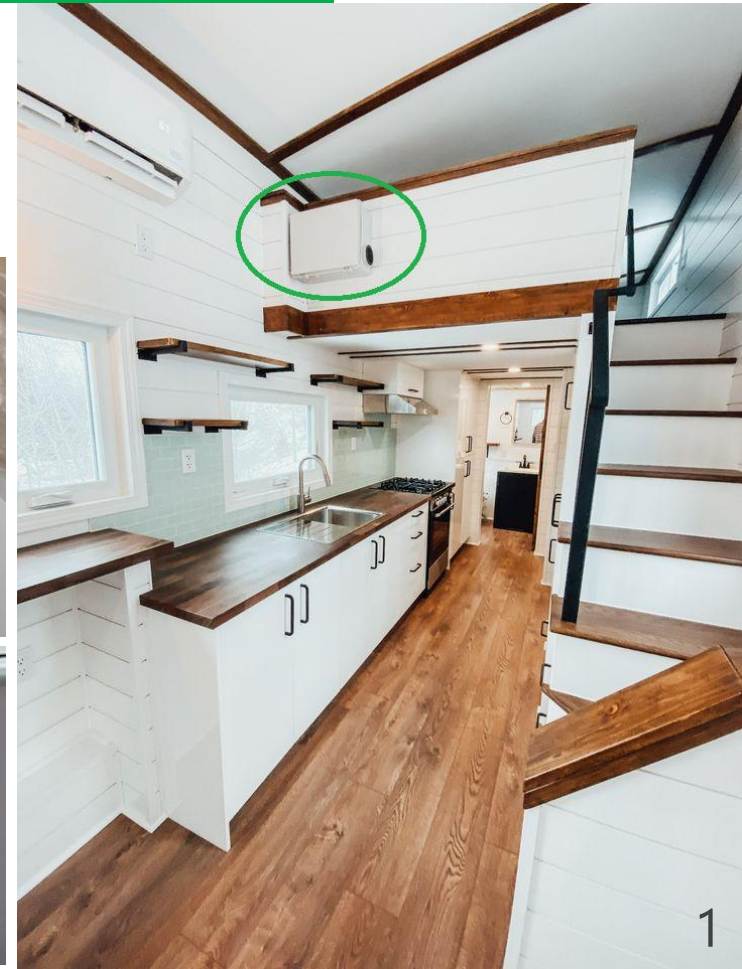


#1

- Mount the product on a wall / ceiling.
- You may also place it on a table / floor.

Wall / Ceiling Mount

- Fasten 4× brackets to the back of the product (see A).
- Use a pencil to mark the hole or slot of each bracket on the wall or ceiling (see B).
- Attach hooks or nails to the marked points.
- Affix the product to the wall or ceiling.

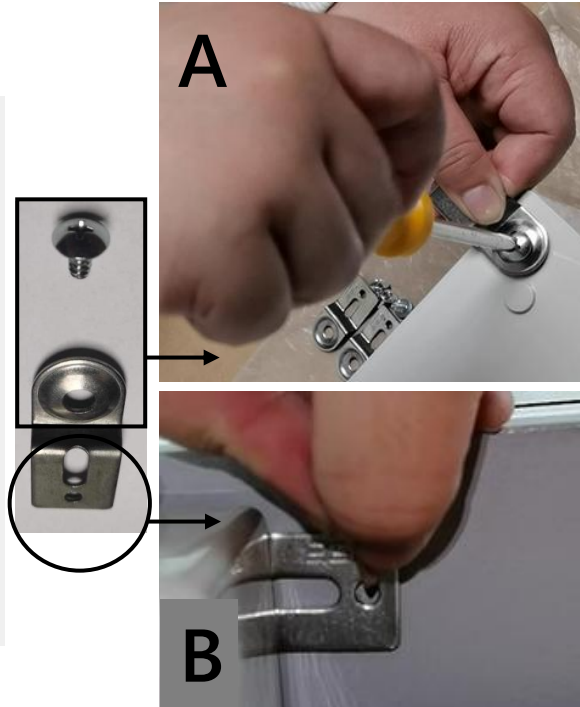


#2

→ Drill 2× 3-inch (~76 mm) diameter holes.

→ To avoid drilling, use a fabric seal that has 2 zipper orifices.

Window / Door

- Make a board by cutting a piece of wood, plastic, rigid insulation sheet, or Kraft board to at least 4-inch (~102 mm) in width. You may also buy an off-the-shelf vent board.
 - Drill 2 holes into one board or 1 hole each into two boards.
 - Attach the board(s) to a section of a window / door.
 - **Alternatively, a fabric seal can be attached to the edges of the window / door. It may be the best option for a casement or non-sliding window.**
- ✓ The board(s) or fabric material(s) shall be firmly sealed to the edges of the window / door.

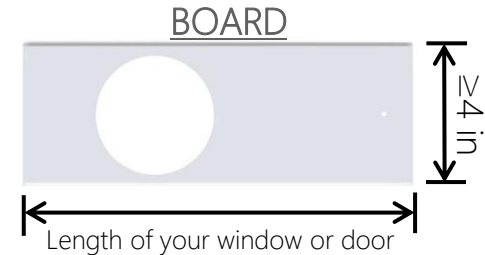

Wall / Ceiling

- Drill 2 holes into the wall / ceiling.
- ✓ The wall or ceiling shall be sufficiently sturdy to install the product.

#3

- Insert 2× ducts into the holes and supply power to the product.
- Ensure that the zippers are fastened if a fabric seal is used.

